



Code	Power	Cabling	Dimension	Protection	Body	IP Protection	IK Protection	Class	Cabling	Fissaggio
LUNGA PS2039X2-230	<b>2 TUBI FLUORESCENTI T5</b>	39 W G5	<b>920 x 130 x 29H mm</b>	SCHERMO IN VETRO TEMPRATO	<b>ALLUMINIO ESTRUSO</b>	IP67	<b>IK08</b>	I	<b>ASSENTE</b>	CON GANCI
MEDIA PS2024X2-230	<b>2 TUBI FLUORESCENTI T5</b>	24 W G5	<b>620 x 130 x 29H mm</b>	SCHERMO IN VETRO TEMPRATO	<b>ALLUMINIO ESTRUSO</b>	IP67	<b>IK08</b>	I	<b>ASSENTE</b>	CON GANCI

The body of the product in Polymethylmethacrylate offers excellent resistance to acids, dilute alkaline solutions, fats and oils.

The ceiling light consists of a sturdy black anodized extruded aluminum profile. The aluminum body dissipates the heat produced by the electronic supply circuit and the fluorescent tube, considerably increasing their life.

The molded polymer side parts are screwed directly to the extruded aluminium body, while the front of the ceiling is covered by the 4 mm tempered Pirex glass screen and perfectly sealed with a polyurethane seal

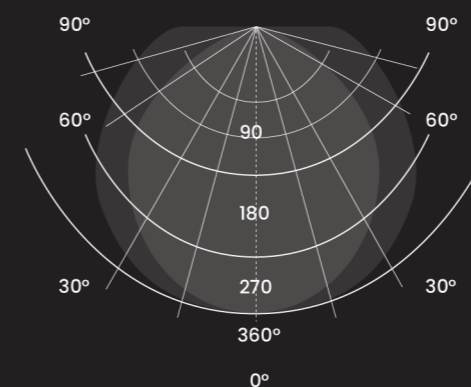

PS20 **2X39W**   
**2X24W** 